
B9461 INSTALLATION INSTRUCTIONS



A WARNING

DISCONNECT POWER BEFORE RELAMPING OR WIRING THE FIXTURE. READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

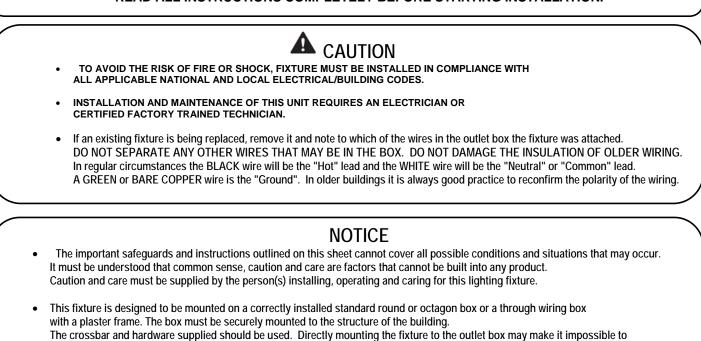

• For your safety be certain that all circuit breakers controlling outdoor lighting and equipment are GFI breakers.

FIXTURE PREPARATION

 
correctly align the fixture.

1. Remove the fixture, parts and parts bag(s) from the carton.

NOTICE: Before discarding the carton, double check to make certain that all parts are found.

FIXTURE INSTALLATION

- 1. thread the 2 longest screw onto the mounting bar. Attach the crossbar to the outlet box. (The green screw should face out).
- 2. Adjust the screws on the mounting bar so that they extend 3/16" beyond the back of the fixture. Lock the screws in place with the hex nuts.
- 3. Trial fit the fixture to the junction box and mark the location on the wall of the mounting hole of the support bracket. Remove the fixture from the outlet box. Drill hole in the wall and install anchor.
- 4. Fasten the ground wire to the green or bare copper wire in the outlet box or to the green screw on the crossbar.



 Fasten the white fixture lead to the white wire in the outlet box. Fasten the wires together with an approved fastener (wire nut). Starting about 1' below the fastener, tightly wrap the connection with electrical tape so that the connection seals the end of the fastener.

WARNING Make sure that there is no exposed wire or strands that could cause a dangerous short circuit !	
electrical tape	
approved faster (wire nut)	ner

- 6. Connect the black fixture lead to the black wire in the outlet box. Fasten the joined wires as in step 6..
- 7. To prevent water from flowing into the outlet box, put a bead of weatherproof caulking or silicone sealant around the edge of the mounting pan.
- 8. Using the end nuts and sealing washers, fasten the fixture to the outlet box.
- 9. Place the screw through the support bracket and screw into the wall anchor.

10. Install the lamps (light bulbs). NOTE: This fixture is rated for Max 60 watt type B, BA, C or CA lamps .

WARNING DO NOT EXCEED RECOMMENDED WATTAGE!

- 11. Loosen the thumb screw on the chimney collar. Pull up on the chimney or remove it to create clearance for the glass.
- 12. Place the glass on the support pan. Reinstall the chimney and push it down to hold the glass in place. Tighten the thumb screw.
- 13. Restore power to circuit at breaker or fuse box.

