F5908 INSTALLATION INSTRUCTIONS



WARNING

DISCONNECT POWER BEFORE RELAMPING OR WIRING THE FIXTURE. READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

CAUTION
TO AVOID THE RISK OF FIRE OR SHOCK, FIXTURE MUST BE INSTALLED IN COMPLIANCE WITH ALL APPLICABLE NATIONAL AND LOCAL ELECTRICAL/BUILDING CODES.
INSTALLATION AND MAINTENANCE OF THIS UNIT REQUIRES AN ELECTRICIAN OR CERTIFIED FACTORY TRAINED TECHNICIAN.
If an existing fixture is being replaced, remove it and note to which of the wires in the outlet box the fixture was attached. DO NOT SEPARATE ANY OTHER WIRES THAT MAY BE IN THE BOX. DO NOT DAMAGE THE INSULATION OF OLDER WIRING. In regular circumstances the BLACK wire will be the "Hot" lead wire and the WHITE wire will be the "Neutral" or "Common" lead wire. A GREEN or BARE COPPER wire is the "Ground". In older buildings it is always good practice to reconfirm the polarity of the wiring.

NOTICE

- The important safeguards and instructions outlined on this sheet cannot cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that cannot be built into any product. Caution and care must be supplied by the person(s) installing, operating and caring for this lighting fixture.
- This fixture is designed to be mounted on a correctly installed standard round or octagon box or a through outlet box with a plaster frame. The box must be securely mounted to the structure of the building. The mounting bar and hardware supplied should be used. Directly mounting the fixture to the outlet box may make it impossible to correctly align the fixture.
- NOTE: For your safety be certain that the circuit breakers controlling outdoor lighting and equipment are GFI breakers.

FIXTURE PREPARATION

1. Remove the fixture, parts and parts bag(s) from the carton.

NOTICE:

Before discarding the carton, double check to make certain that all parts are found.

FIXTURE INSTALLATION


NOTICE:

This Luminaire must be mounted or supported independently of an outlet box

New construction: Double check that APPROVED BOX and SUPPORT were correctly installed following the manufacturers instructions.

Remodeling (with enclosed ceiling) Install APPROVED BOX and SUPPORT following manufacturer's instructions.

- **1.** Drill holes for the plastic anchors. Install the plastic anchors.
- 2. Determine the overall desired length of the fixture. Adjust steel cable length and lock on with screws. Measure 6" of lead and ground wire beyond the center of the fixture. Cut off excess wire.Strip the insulation off the ends of the leads exposing approx. 1/2" of wire. Twist the strands of wire together

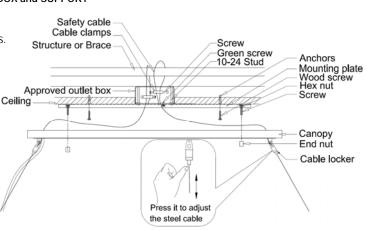

- 3. Slide crimp-on cable clamps onto the SAFETY CABLE. The outlet box may have to be removed for this step. Loop two longer SAFETY CABLE (catercorner of the canopy) over the structure or brace. Thread the long end of the SAFETY CABLE back through the crimp-on cable clamps. Adjust the cable and tightly set the clamps. Thread the SAFETY CABLE into the outlet box (from the top). Reinstall the outlet box if necessary.
- 4. Thread the 2 longest screws into the mounting plate and the hex nut onto the screws (The green ground screw is the front). Attach the mounting plate to the 10-24 STUDS in the outlet box.DO NOT USE THE BOX "EARS". Thread the small hex nuts onto the screws. Adjust the screws so that they extend 3/16" beyond the back of the fixture, Lock the hex nuts against the crossbar.
- 5. Fasten the wood screw.
- 6. Fasten the ground wire to the green or bare copper wire in the outlet box or to the green screw on the mounting ring.

WARNING

Never fasten the ground wire to the black or "hot" wire! Failure to follow this instruction could result in serious injury or death!

7. Fasten the white fixture lead wire to the white wire in the outlet box. Fasten the wires together with an approved fastener (wire nut). Starting about 1" below the fastener, Tightly wrap the connection with electrical tape so that the connection seals the end of the fastener.

A WARNING

Make sure that there is no exposed wire or strands that could cause a dangerous short circuit!

approved fastener (wire nut)

electrical tape

8. Connect the black fixture lead wire to the black wire in the outlet box. Fasten the joined wires as in step 7.

9. Using the end nuts, fasten the fixture to the mounting ring.

- 10. Place the brackets to the frame and lock on with screws , using the tool .
- 11. Place the plate glass between the rubbers. Lock on to the bracket with the glass locker.
- 12. Place the glass rods onto the frame.
- 13. Install the lamps (light bulbs).

NOTE: This fixture is rated for Max 60 watt type B, BA, C or CA lamps.



14. Restore power to circuit at breaker or fuse box.

